



RN 3000 USER MANUAL

ACCESSORY/STRUCTURE





RN 3000 Handlebar mount







 
Aero bar compatible strap

Type-C USB Cable

3mm Hex

HOW TO INSTALL









BATTERY INDICATOR

When the device is power-on, the power button light will indicatethe battery level. When the device is power-off, short press the power button to activate the indicator light (light will shut down automatically after 2 seconds).





11%-20%





21%-100%



HOW TO RECHARGE

 




Fully charged



PHONE CHARGING INSTRUCTION



*External charging cable needs to be purchased additionally

LOCK MODE

To prevent potential damage from high heat or even fire, it is very important to put the bicycle light in lock mode and protect the switch from being pressed.

MAGICSHINE will not be held responsible for damages to person or property resulting from a failure to follow the 'lock' mode instructions.

When the light is off, press and hold the power button down for 5 seconds until the indicator light flashes red.


To unlock -

When the light is locked, press and hold down the power button for 5 seconds until the indicator light constant red.

SWITCHING THE LIGHTING MODE

Hold 1s power button to turn on/off

When you turn the light on, it lights up in the last lighting mode you used. (Mode memory function)

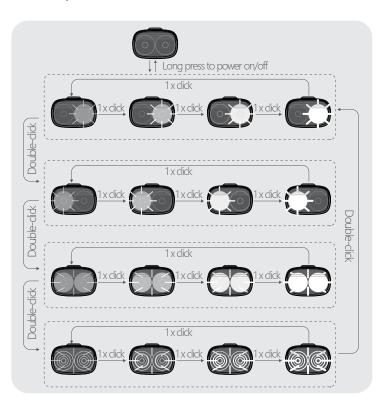

LUMENS/RUN TIME

MODE	BRIGHTNESS	ECO	LOW	MID	HIGH
	LUMENS	150	375	750	1500
	h:min	62:00	28:21	11:40	04:40
	LUMENS	150	375	750	1500
	h:min	62:00	28:21	11:40	04:40
	LUMENS	300	750	1500	3000
	h:min	31:30	13:30	05:40	02:10
	LUMENS	300	750	1500	3000
	h:min	/	/	/	/

OPTIONAL PARTS





Helmet mount

TTA front mount

*Adaptable accessories (sold separately)

⚠ WARNING







Don't cover the light screen when the power is on

IN WARRANTY

The Magicshine lighting system is warrantied for 24 months from the date of purchase.

If you register the lighting system on the Magicshine website you will receive a bonus 6 month warranty.

Battery packs and AC adapters have a 6 month warranty, however, there is no bonus warranty available.

The warranty is limited to defects in material and workmanship on the lighting system itself, the battery pack and the AC adapter.

The warranty is only valid if the affected parts have not been tampered with and there is no intentional damage. Please keep your proof of purchase in a safe place. Proof of purchase must be presented in the event of any claim. Please contact the specialist retailer from whom you purchased the device for complaint or warranty claim.

Alternatively, you can send your complaint or claim directly to Magicshine at

Tel: (+86) 755-295 536 69

Fax: (+86)755-275 897 77

E-mail: support@magicshine.com (order from Magicshine.com online store)

service@magicshine.com (order from other sales channels)

In the event of a justified warranty claim and delivery of a replacement device, you will only be entitled to a model available when replacing. The manufacturer retains the right to make technical modifications.

ANSI FL 1 STANDARD

















